




# Samsung Galaxy Grand Prime Motherboard Replacement

If your phone isn't working and you can't find anything else wrong with it, you need to replace your motherboard.

Written By: Kyle Ruff

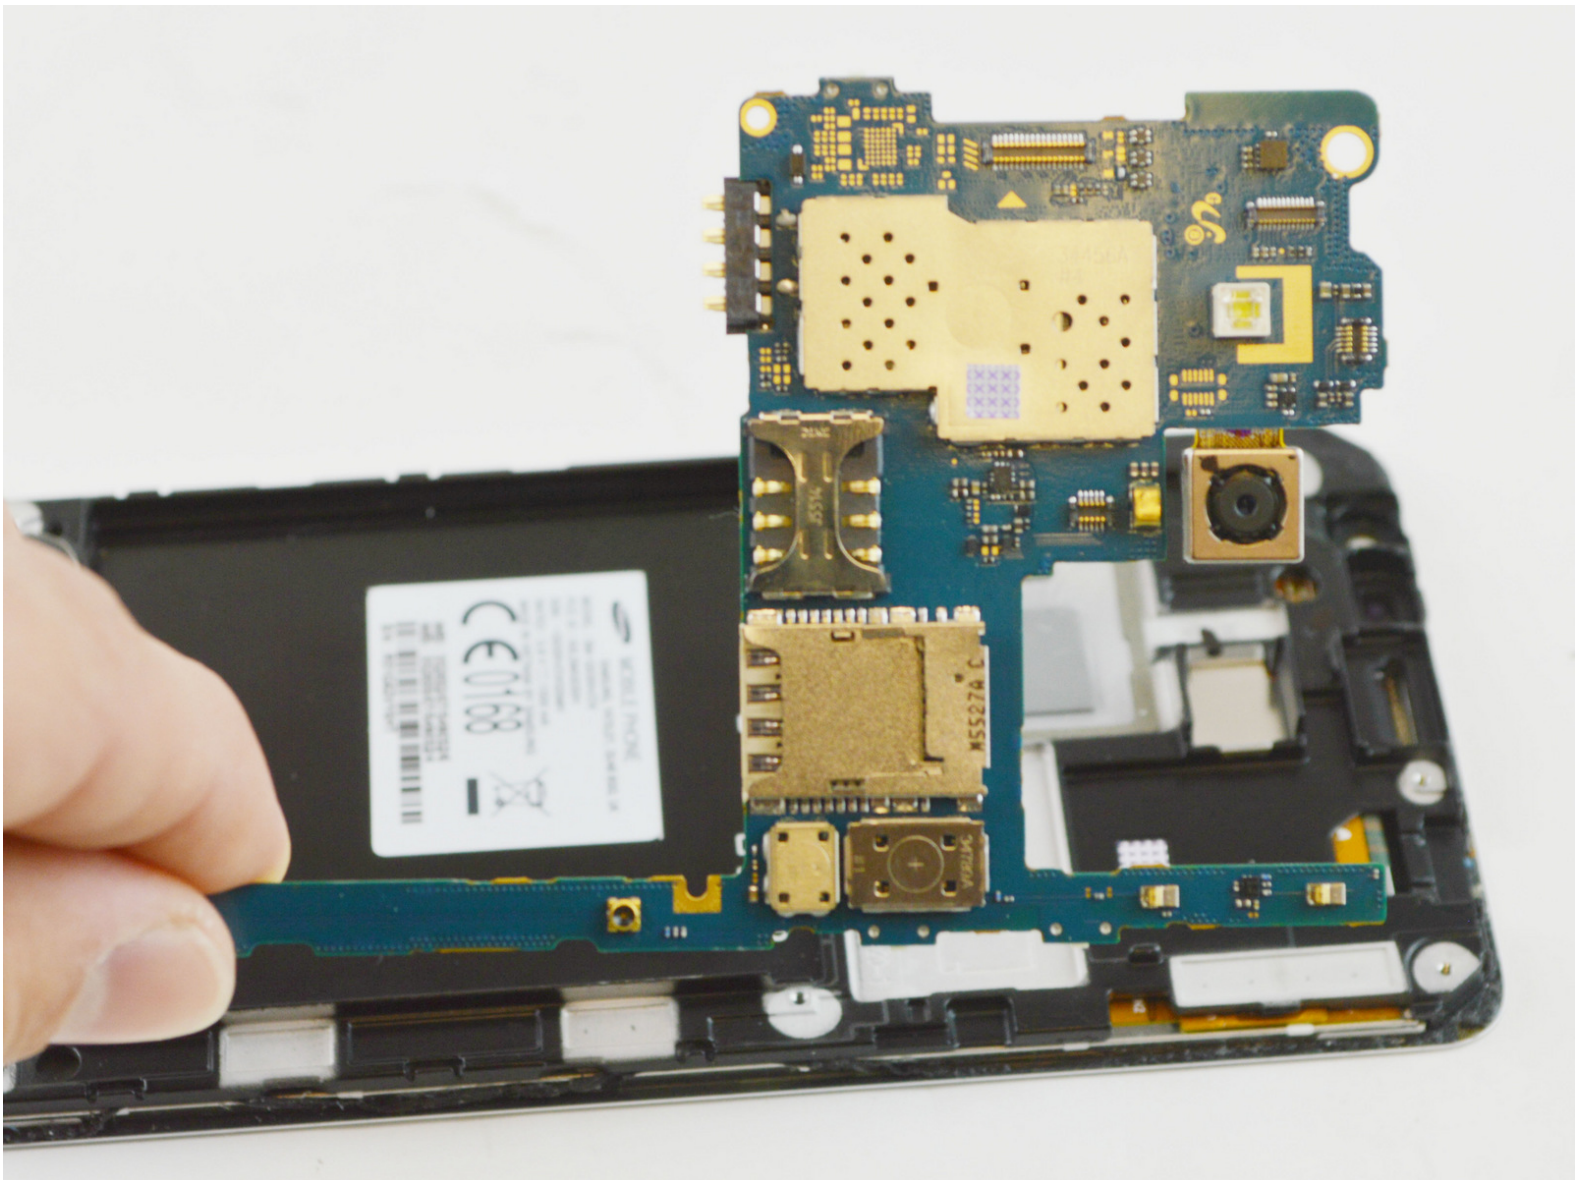

## INTRODUCTION

This replacement is need if you can't find anything else wrong else wrong with your phone but it still won't work.


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery

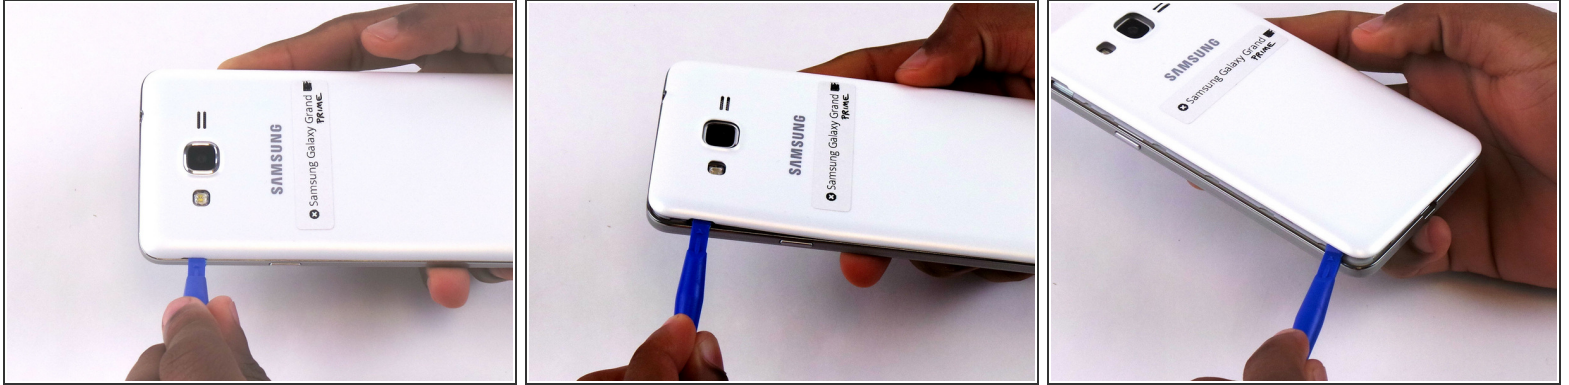

- Remove the back cover of phone by lifting up on the back cover tab with the blue plastic opening tool.
- Go around the edge of the back cover to completely remove it.

## Step 2 — Remove the battery.



- Remove the old battery by lifting up on the thumb tab.
- Periodically clean the brass terminals on the battery and the phone. Place a minute amount of ISO on a Q-tip and gingerly clean the connections.




## Step 3 — Midframe



- Remove the nine 4mm screws from the midframe with a PH000 screw driver

## Step 4

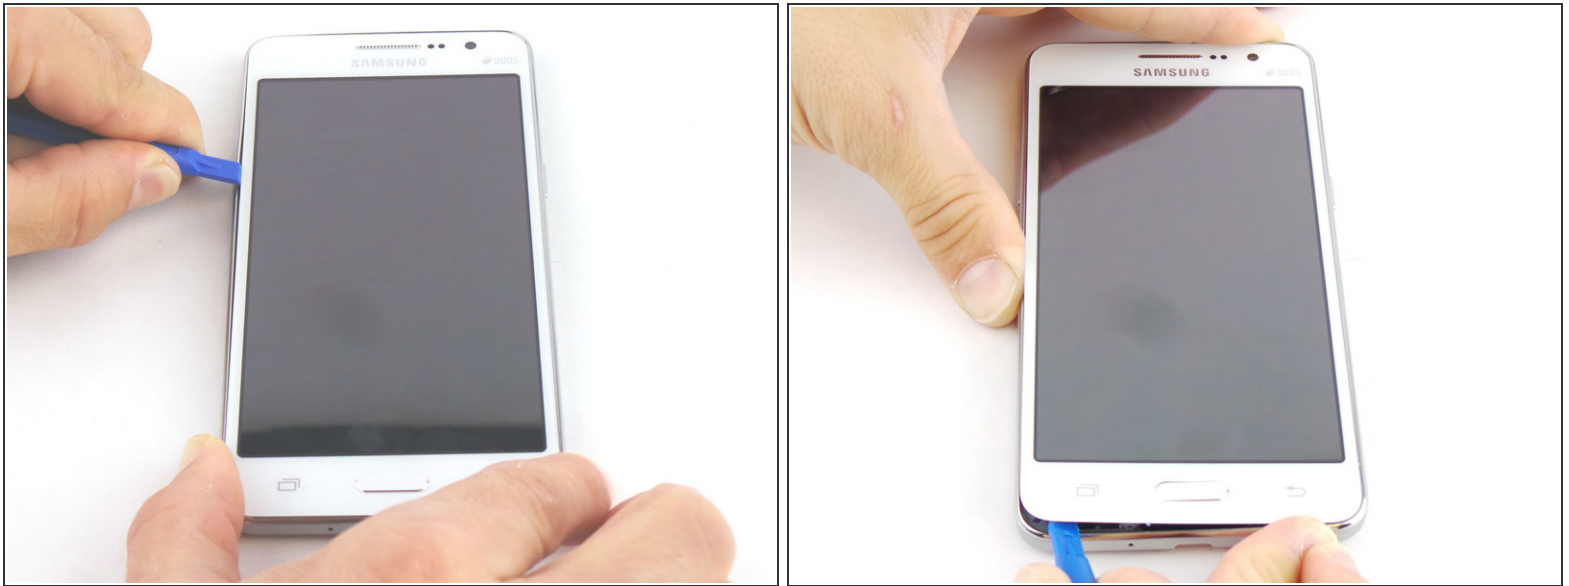


- Wedge the blue plastic opening tool in between the front and side panel.
- Move the blue plastic opening tool around the edges between the front and side panel.

## Step 5





- Make sure that you detach the mid-frame from the inside too.

## Step 6 — Headphone Jack/Speaker Assembly

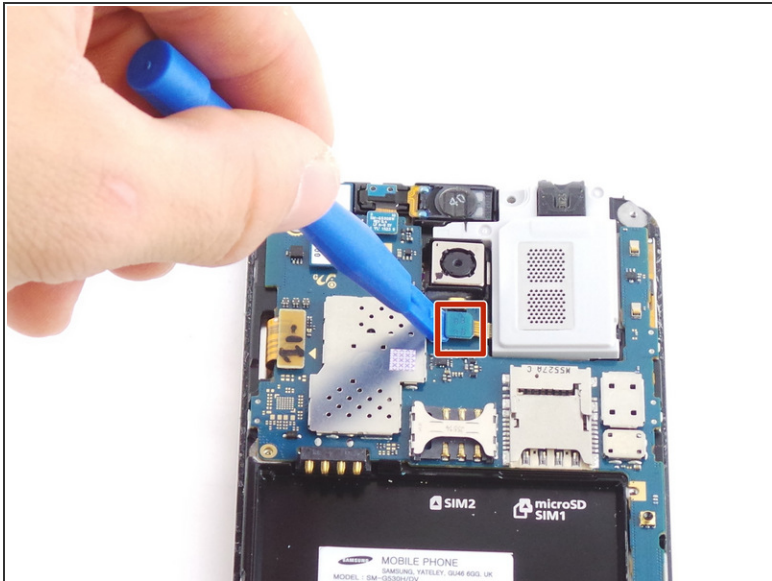



- Unhook the ribbon cable clip with the plastic opening tool and remove the audio jack.

## Step 7 — Earpiece Speaker

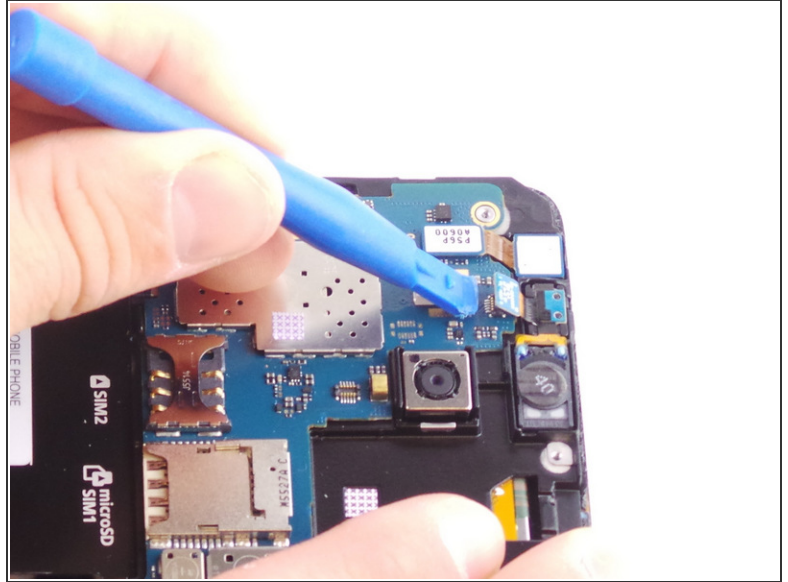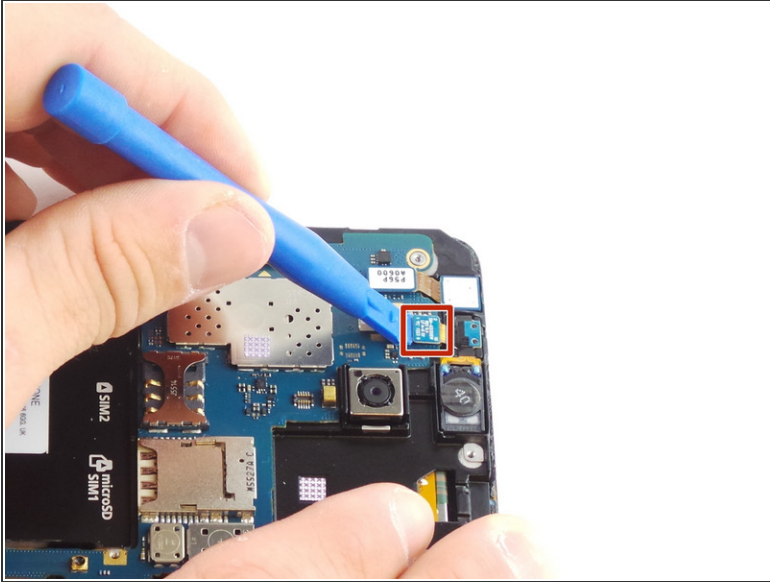

- Use the plastic opening tool to unhook the ribbon cable clip.

## Step 8

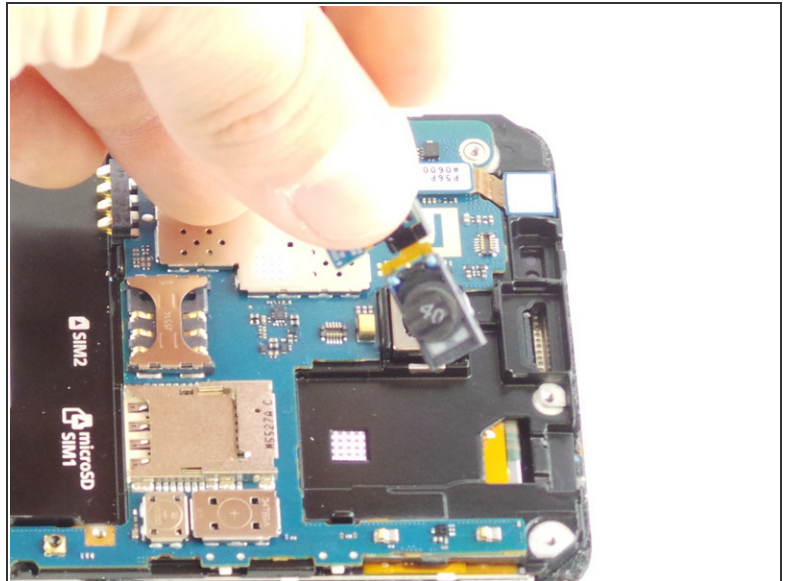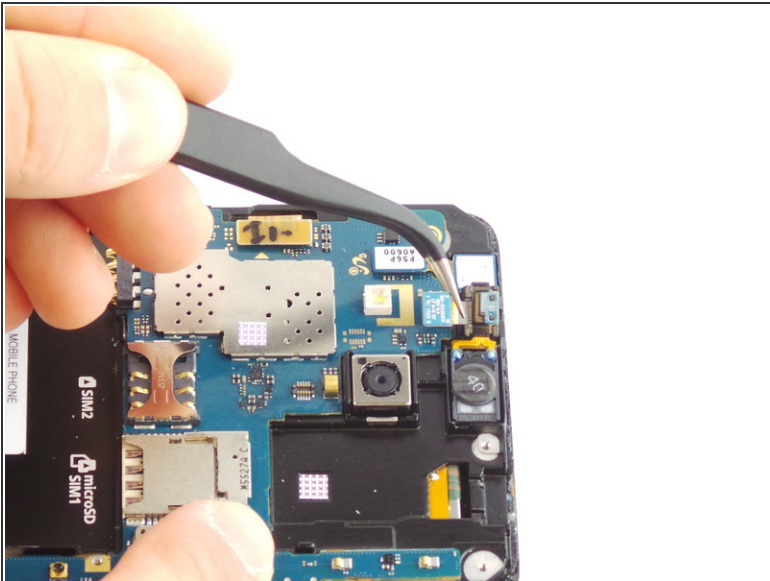

- Gently pull on the connector with the tweezers until the speaker comes off.




## Step 9 — Motherboard





- Unhook the other ribbon cable clip to the screen with the blue plastic opening tool

## Step 10

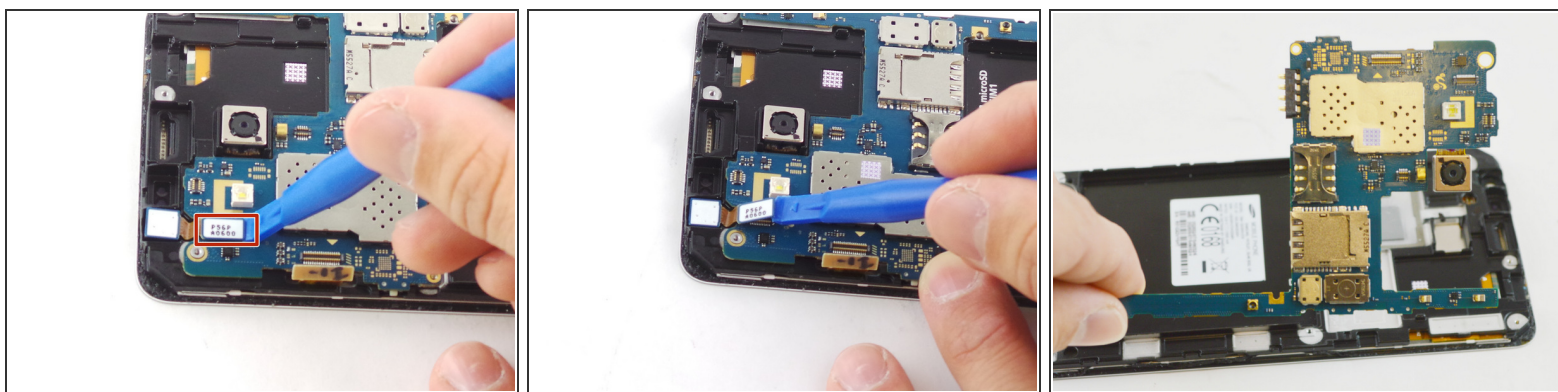

- Unhook the ribbon cable clip to the front camera.
- Lift the motherboard up and out of the device.

## Step 11

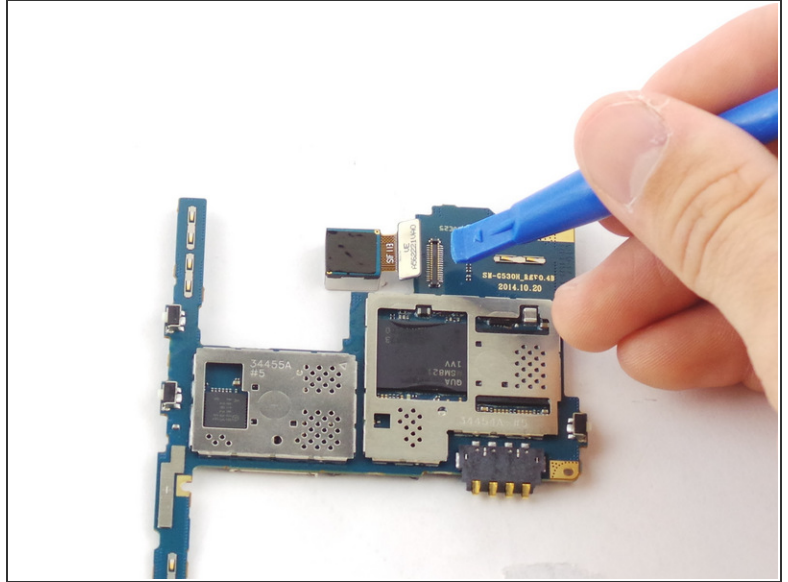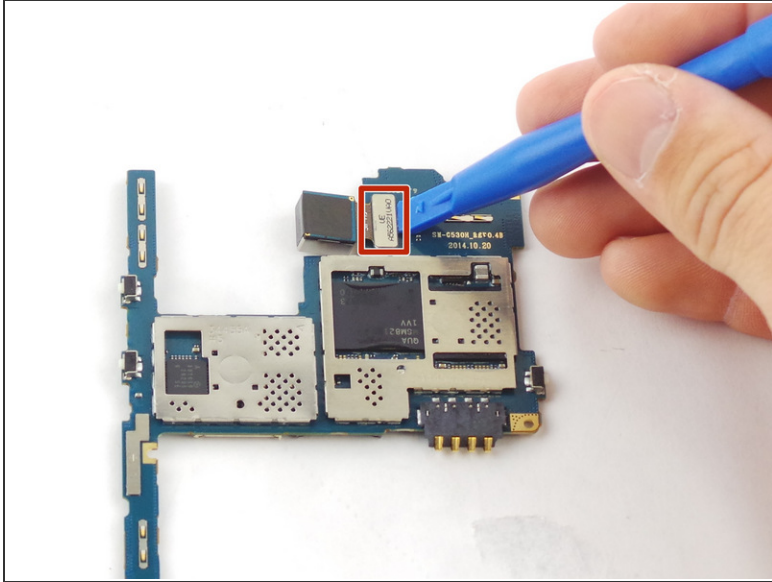

- Remove the motherboard and unhook the ribbon cable clip to the back camera

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 03:40:24 PM.